


12. Adjustment

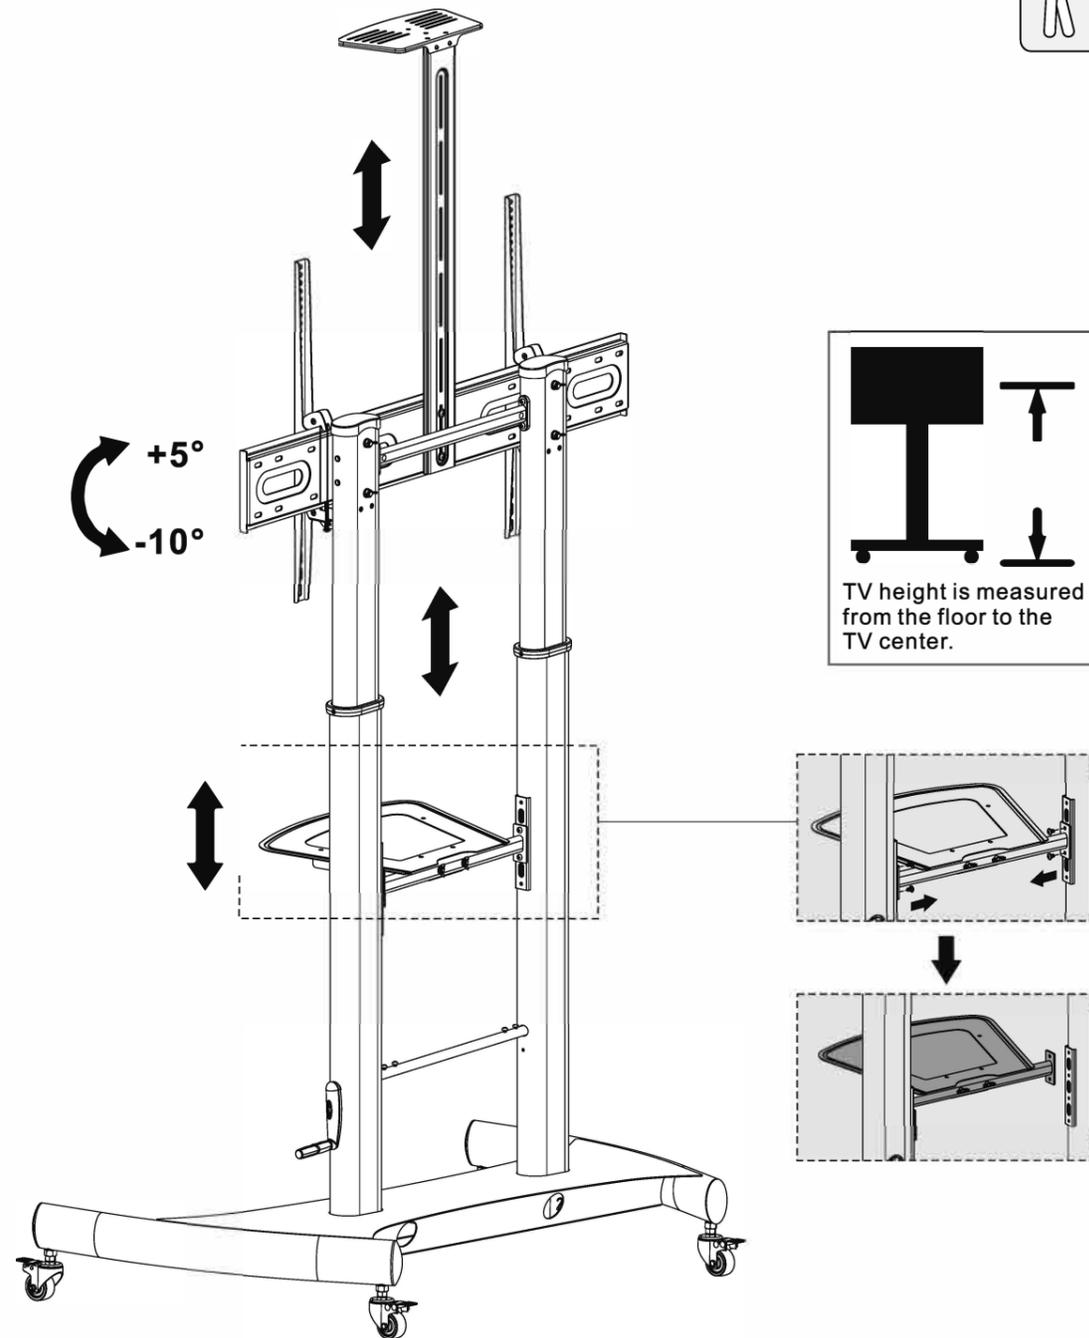

Note: It is recommended to adjust the columns to the desired height before installing the display.


Maintenance

- Check if the bracket is secure and safe to use at regular intervals(at least every three months).
- Please contact your distributor if you have any questions.

TV Cart



WARNING: EXCEEDING THE WEIGHT CAPACITY CAN RESULT IN SERIOUS PERSONAL INJURY OR DAMAGE TO EQUIPMENT!

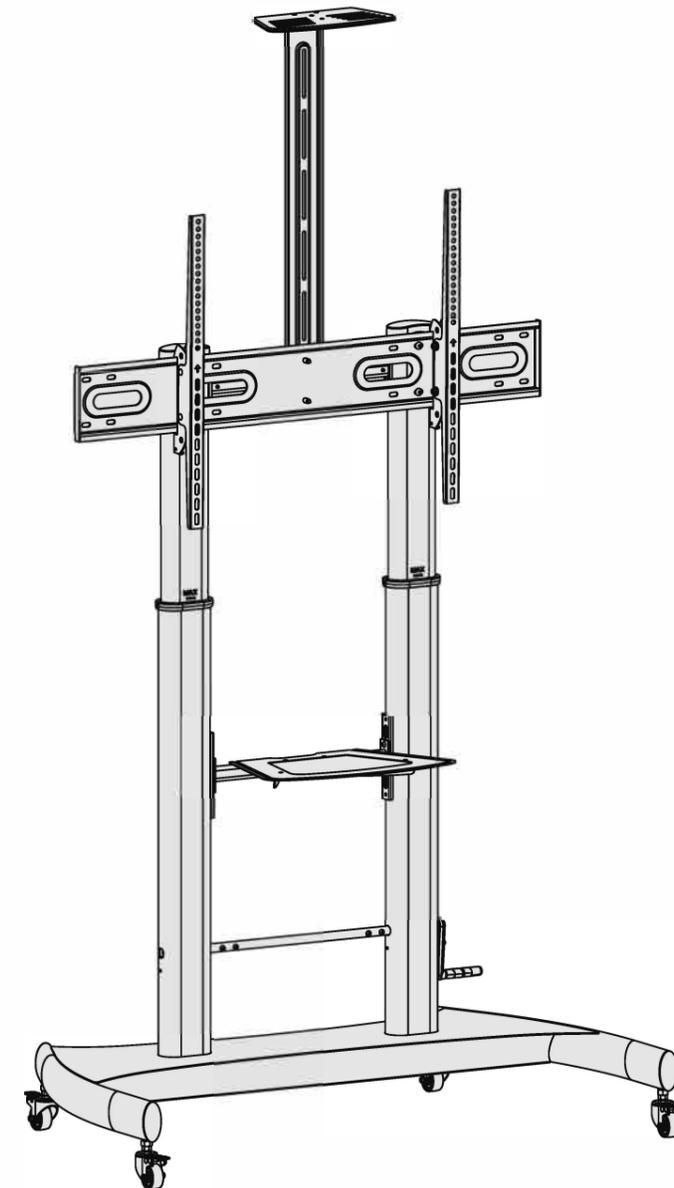

INSTALLATION MANUAL

HLG604742B



400x400/600x400
800x400/800x600
900x600/1000x600

100"
MAX



rated
for TV

100kg/220lbs



rated
for DVD

5kg/11lbs



rated
for CAMERA

5kg/11lbs

NOTE: Read the entire instruction manual before you start assembly.

⚠ WARNING



- Do not begin the installation until you have read and understood the instructions and warnings contained in this installation sheet. If you have any questions regarding any of the instructions or warnings, please contact your point of purchase.
- This mounting bracket was designed to be installed and utilized **ONLY** by following the instruction of this manual. Improper installation of this product may cause damage or serious injury.
- This product should only be installed by someone with professional mechanical ability who has basic building experience and fully understands this manual.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- Always use an assistant or mechanical lifting equipment to safely lift and position the equipment.
- Tighten screws firmly, but do not over tighten. Over tightening can cause damage to the product, which largely reduces weight capacity.
- This product is for indoor use only. Using this product outdoors could lead to product failure and personal injury.

Requirement for Installation






Parts Checklist


IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installation. If any parts miss or isn't correctly provided, contact your point of purchase for a replacement.

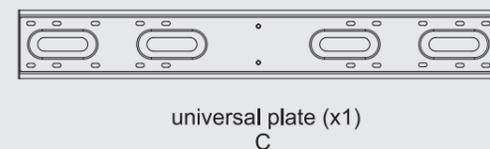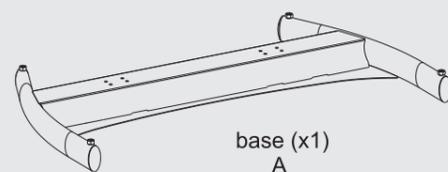

Package M

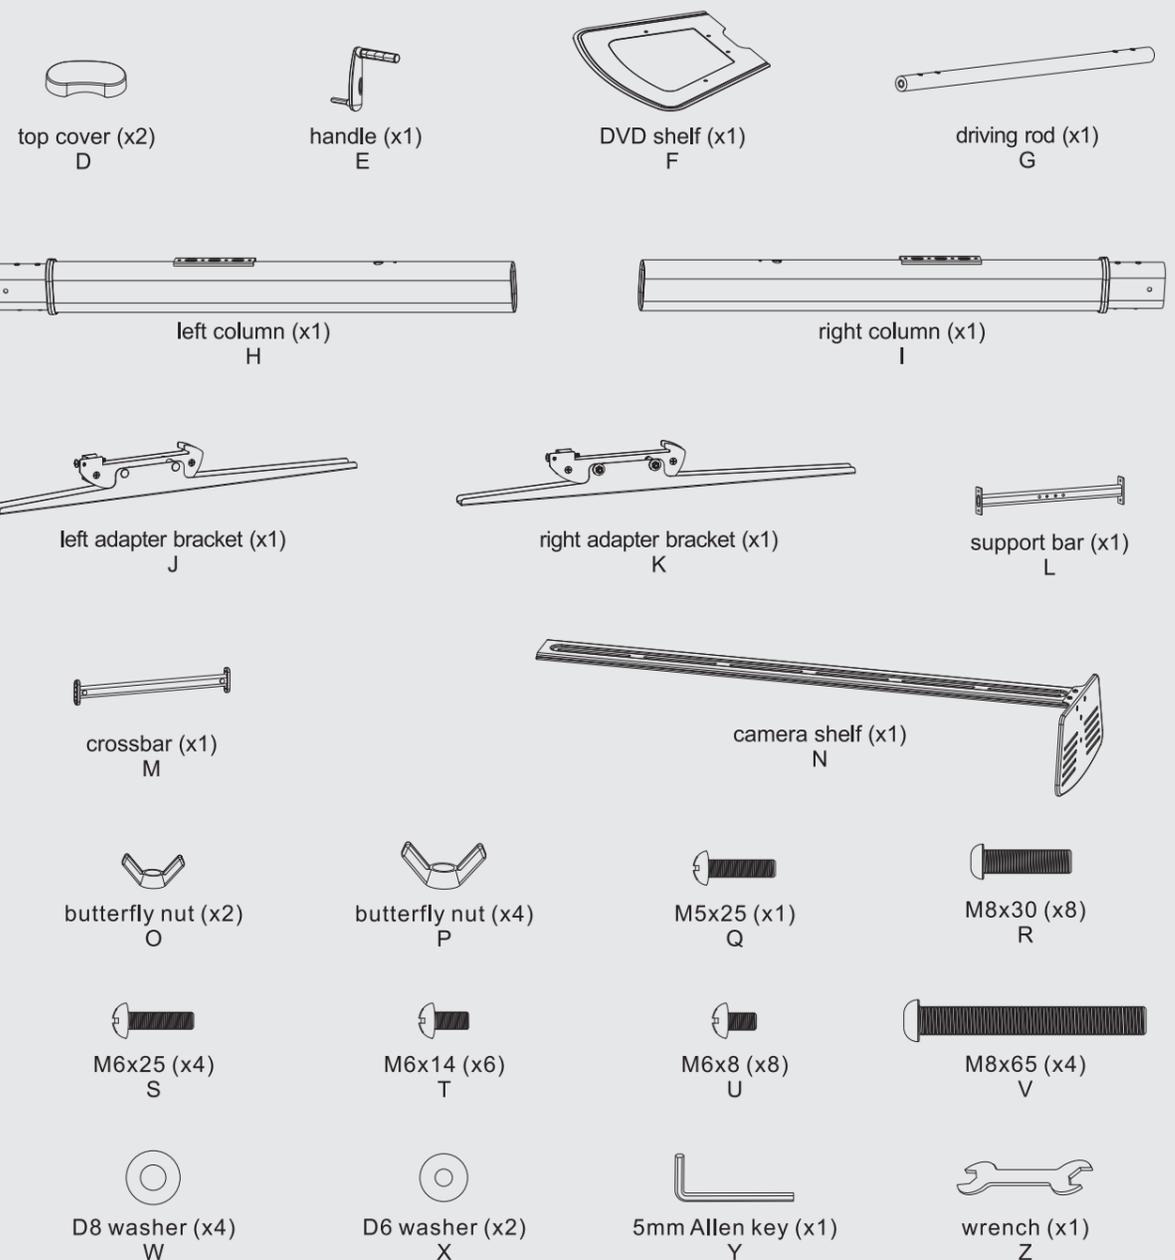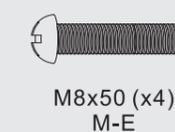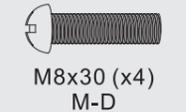


1. Installing the Wheel Caster

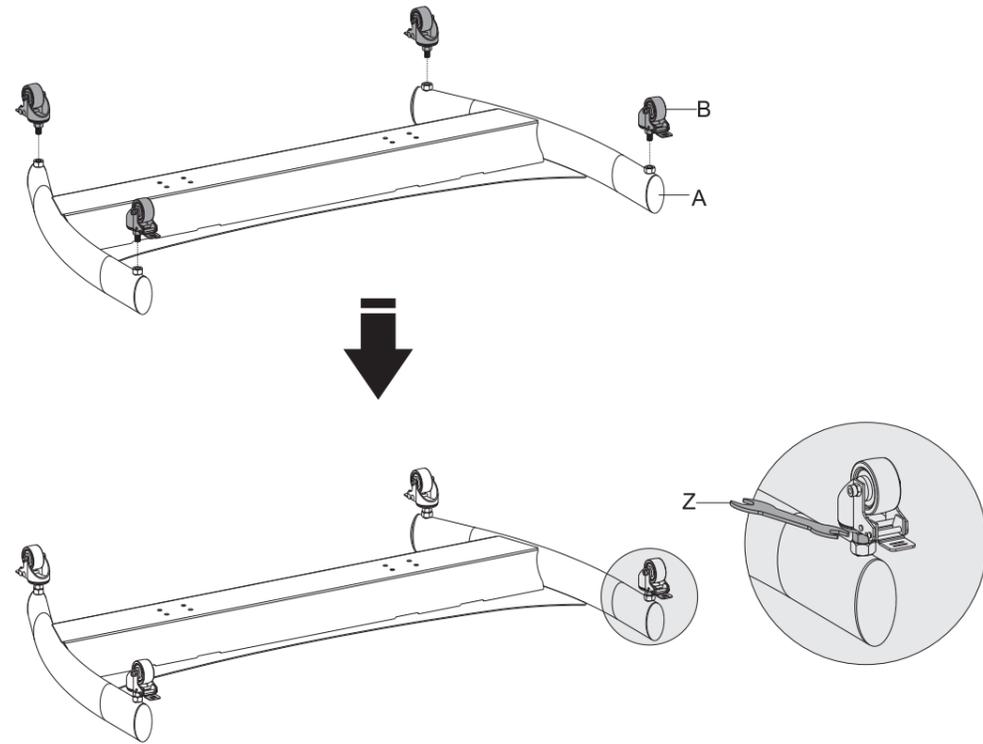


Note: Each caster can be adjusted independently for fine tuning. Slightly turn the nut to lower or raise the base.

2. Adjusting the Columns

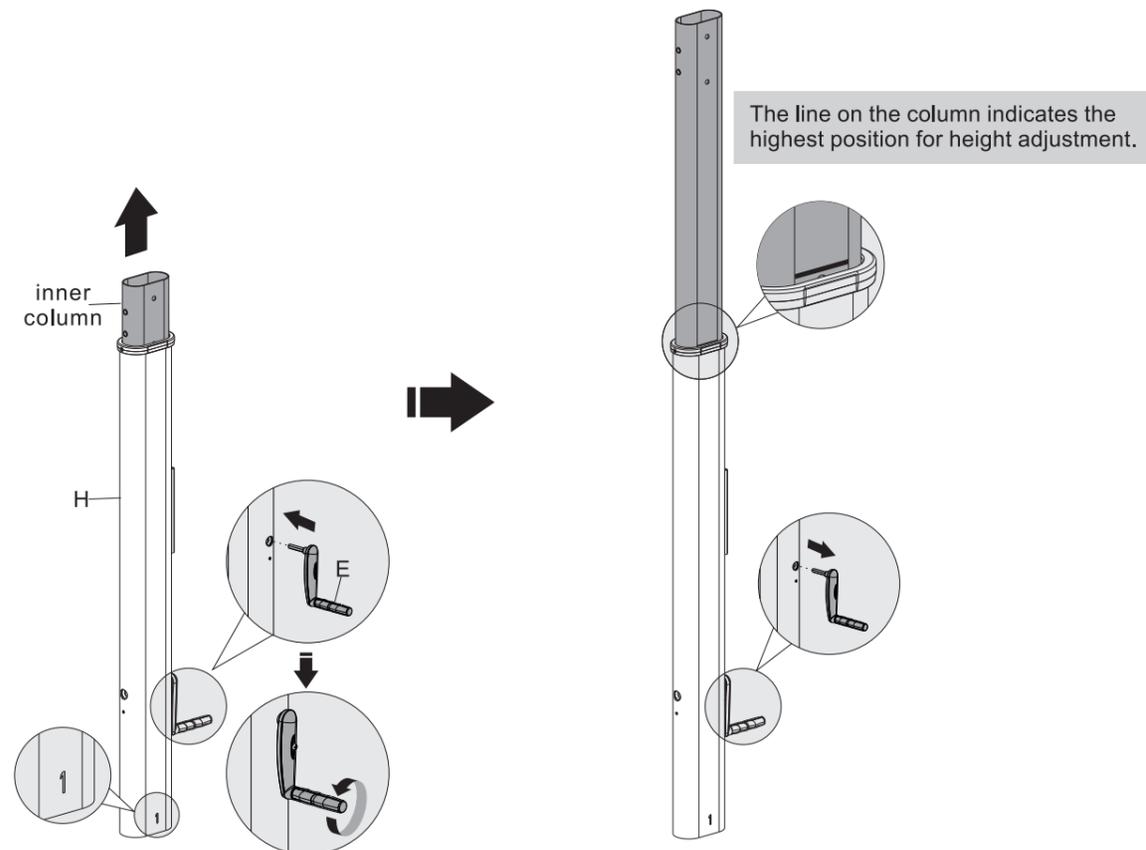

The line on the column indicates the highest position for height adjustment.


3. Attaching the Driving Rod to the Two Columns

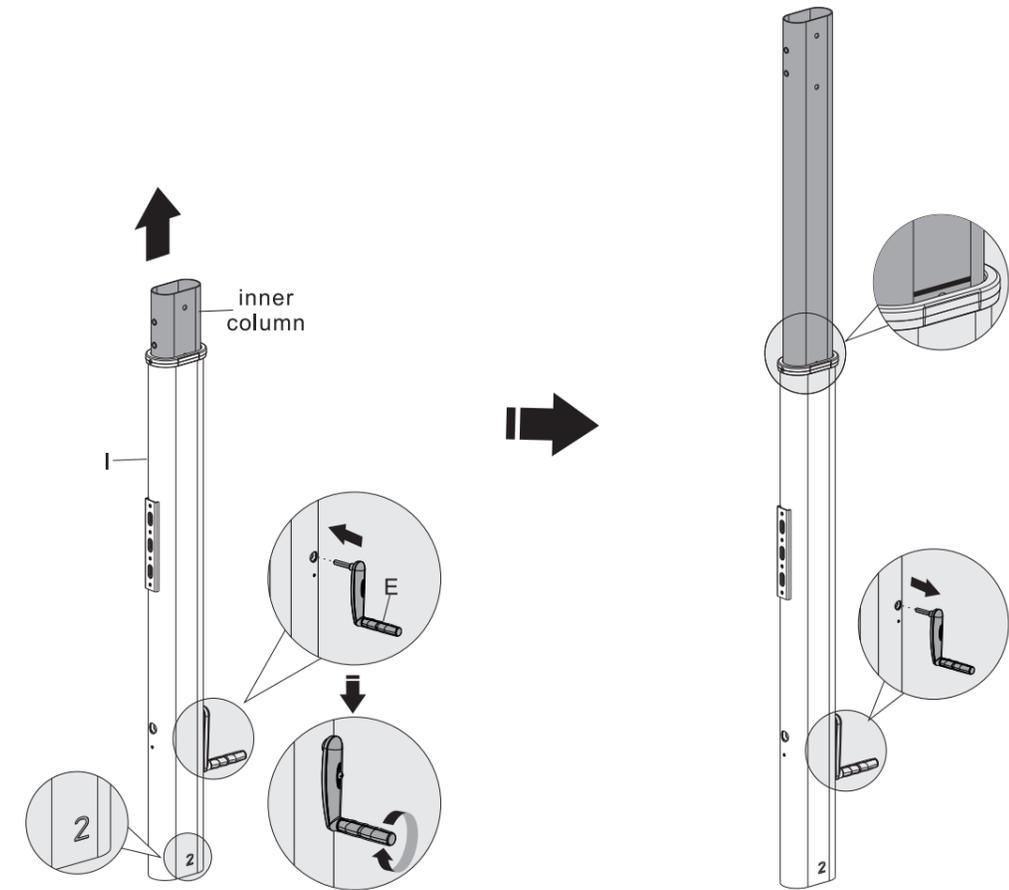

Attach the handle to the column marked with "1".
Attach the handle to the column marked with "2".
Turn the handle to make the inner column run upwards to the highest position.

NOTE: With the "1" and "2" mark facing forward.


3. Attaching the Driving Rod to the Two Columns

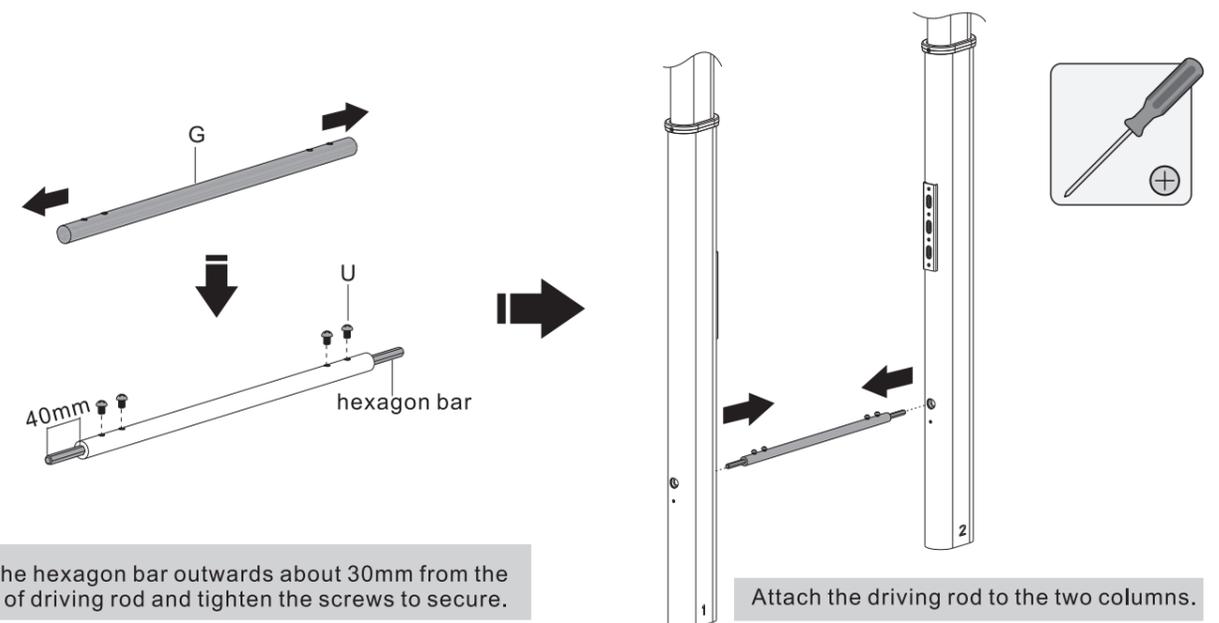


Pull the hexagon bar outwards about 30mm from the ends of driving rod and tighten the screws to secure.

Attach the driving rod to the two columns.


4. Attaching the Columns to the Base

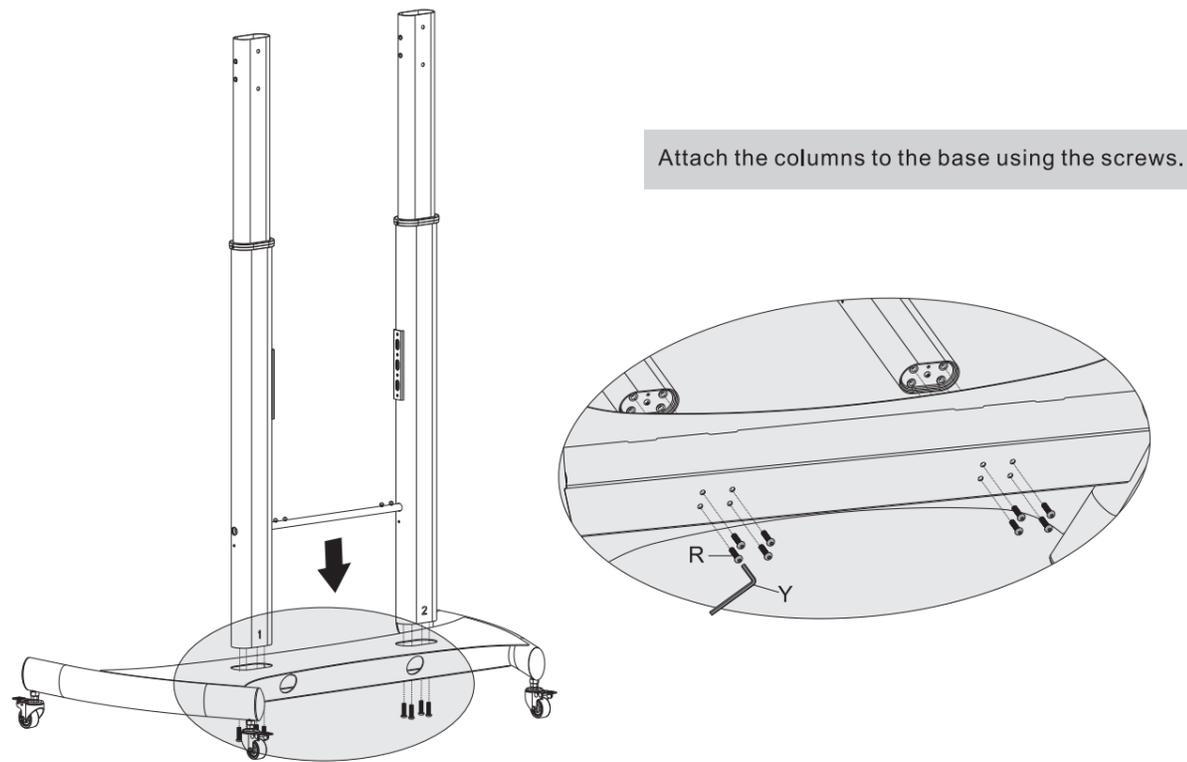


5. Installing the Crossbar

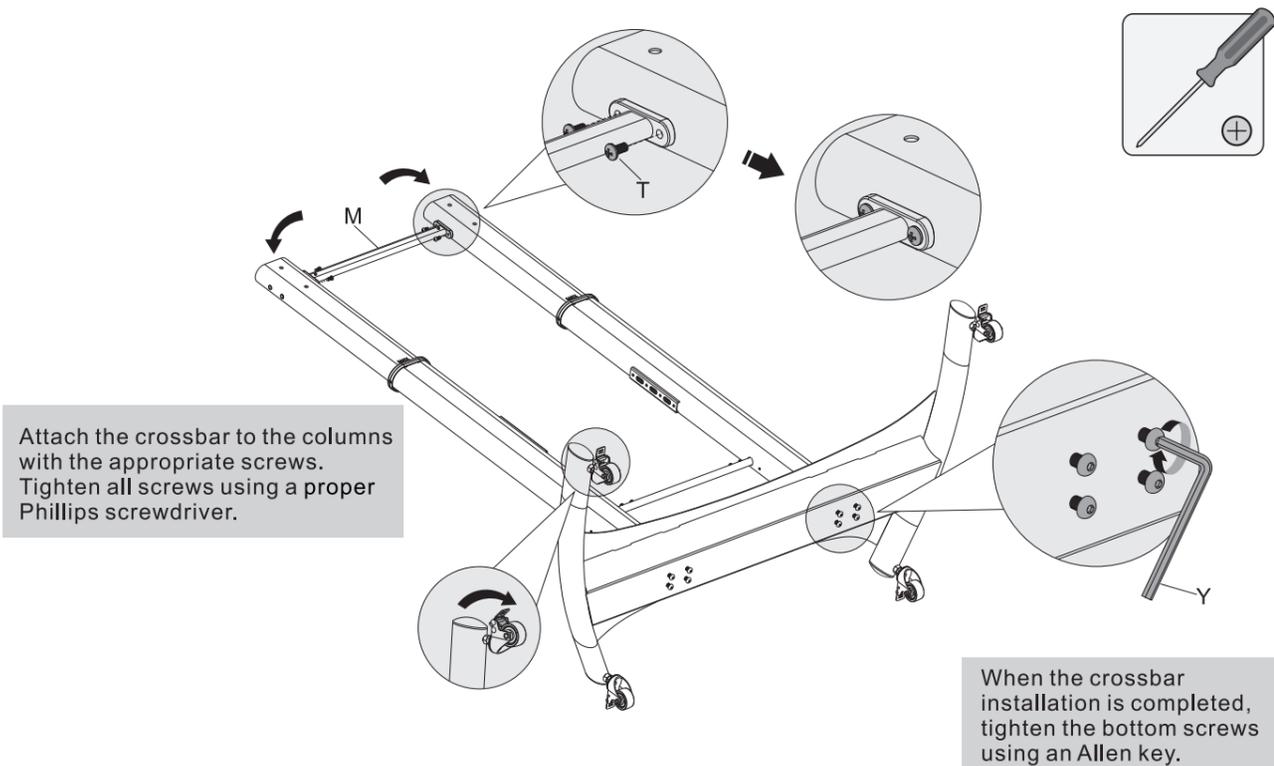


6. Installing the Universal Plate

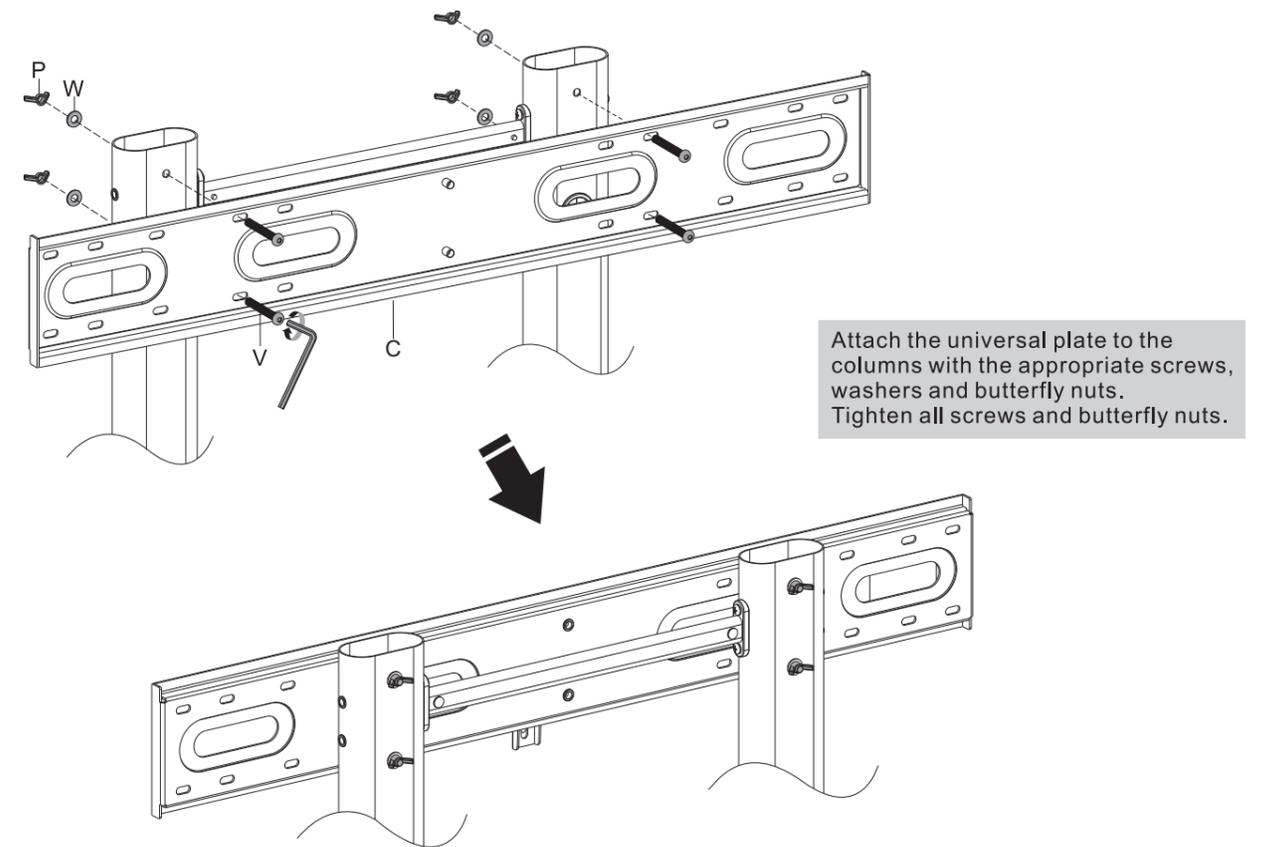



7. Adjustment

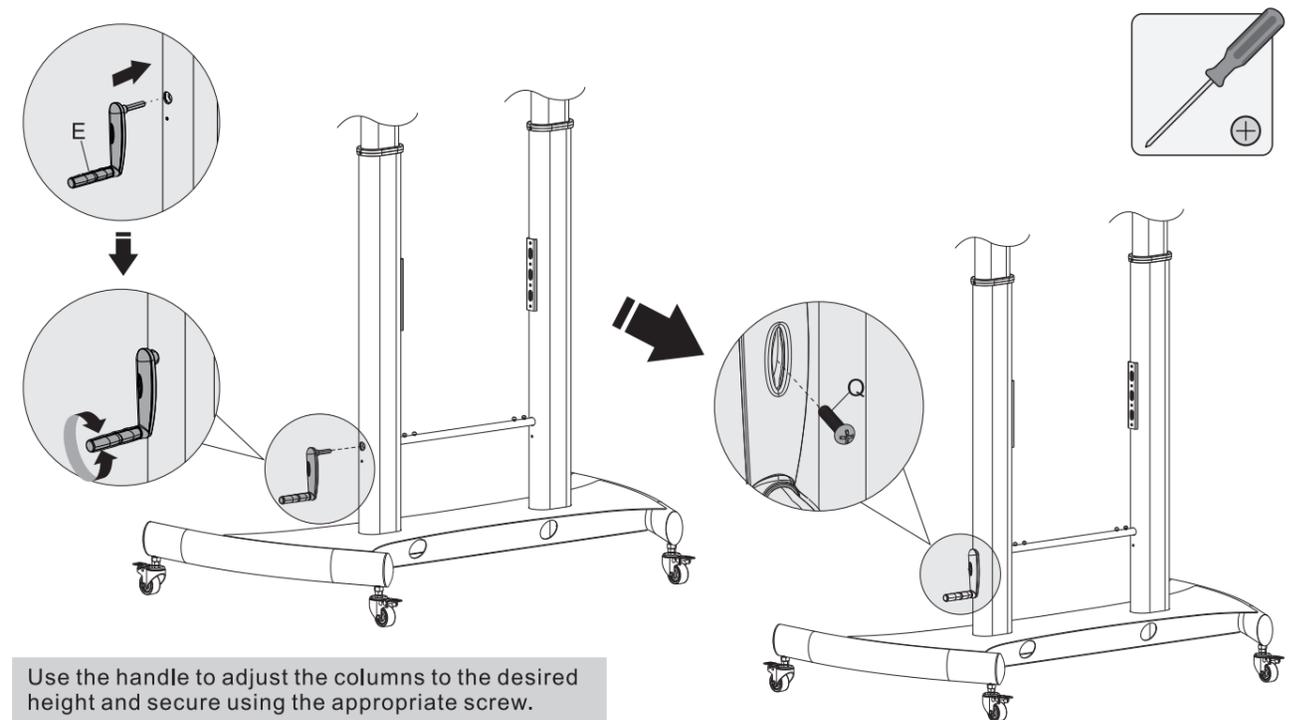

8. Installing the Adapter Brackets


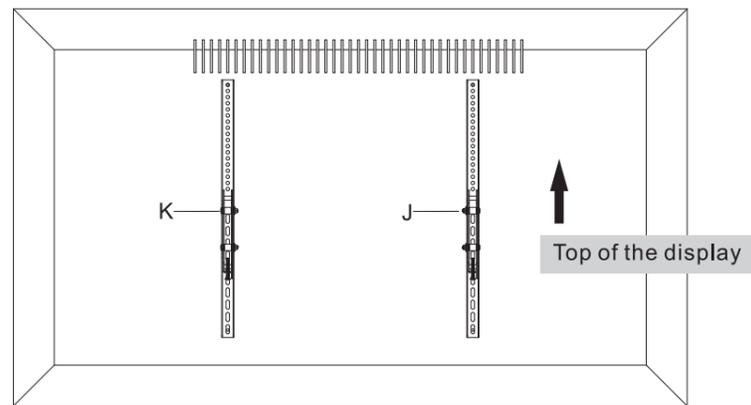


8a. For Flat Back Screens

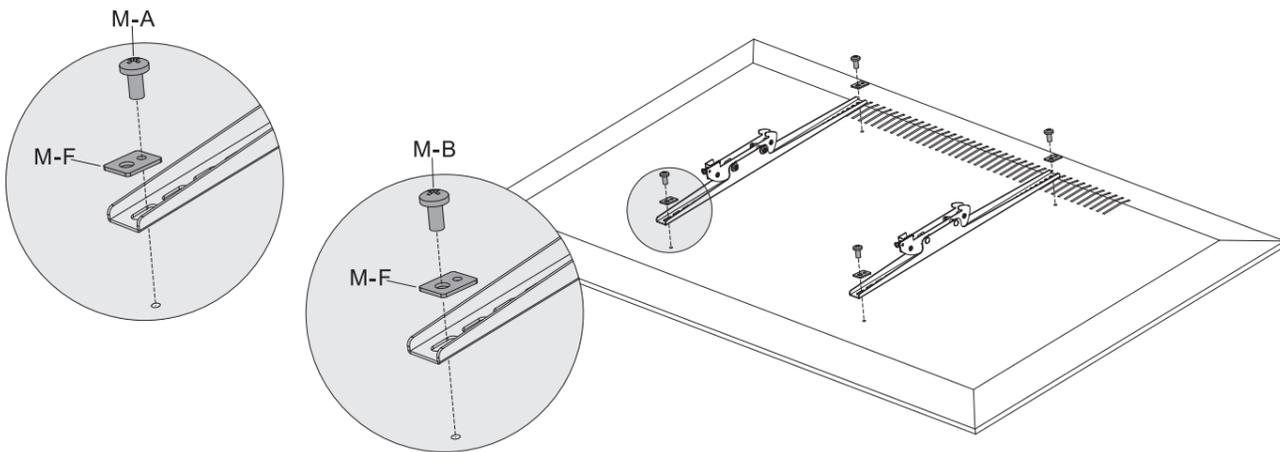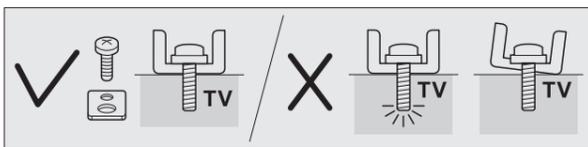

| | | | | | |
|------------|--|--|------------|--|--|
| M-A | | | M-B | | |
| M-F | | | | | |

8b. For Screens with Irregular Back

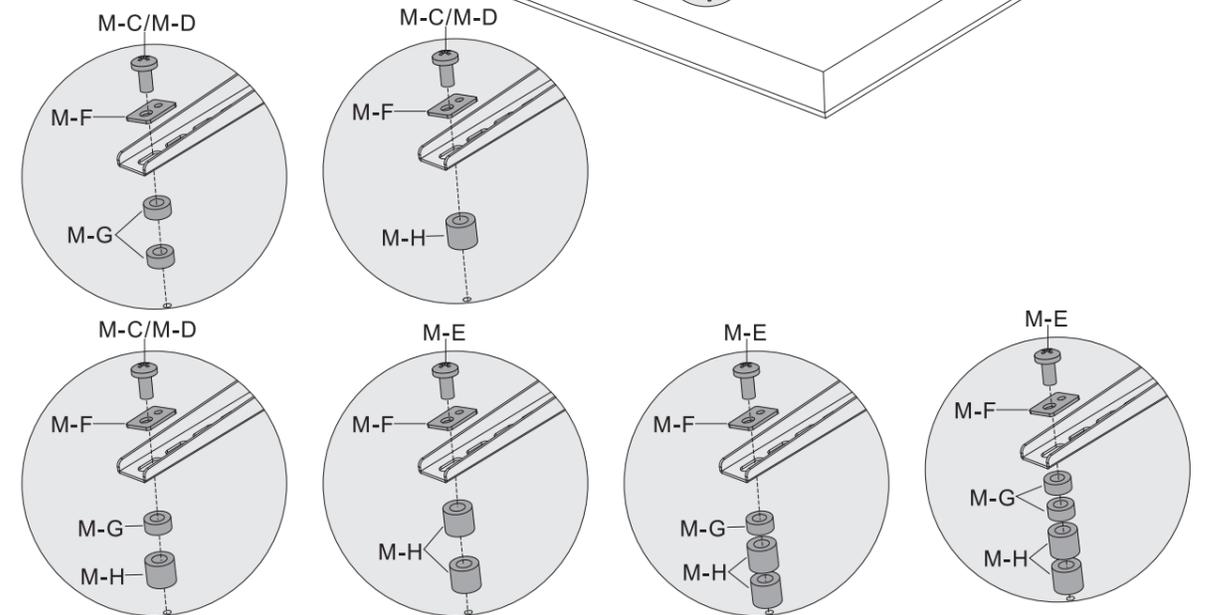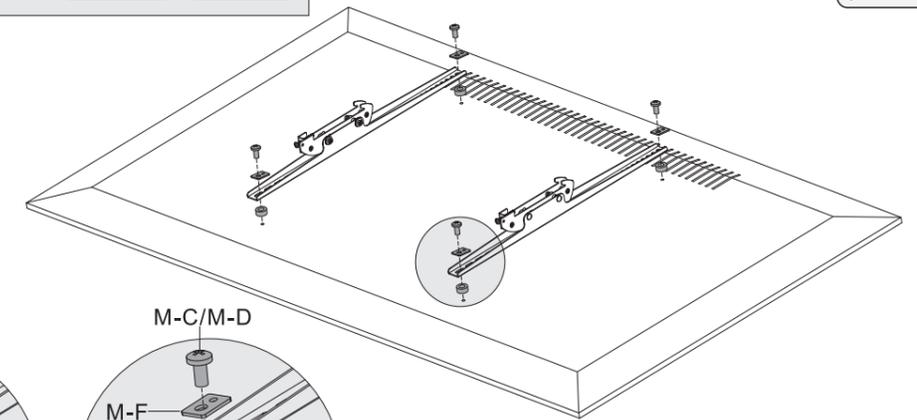


| | | | | | |
|------------|--|--|------------|--|--|
| M-C | | | M-D | | |
| M-E | | | M-F | | |
| M-G | | | M-H | | |

Note: Choose the appropriate screws, washers and spacers (if necessary) according to the type of screen.
 • Position the adapter brackets as close as possible to the center of the display.
 • Screw the adapter brackets onto the display.


Tighten all screws but do not over tighten.

9. Hooking the Display onto the Universal Plate

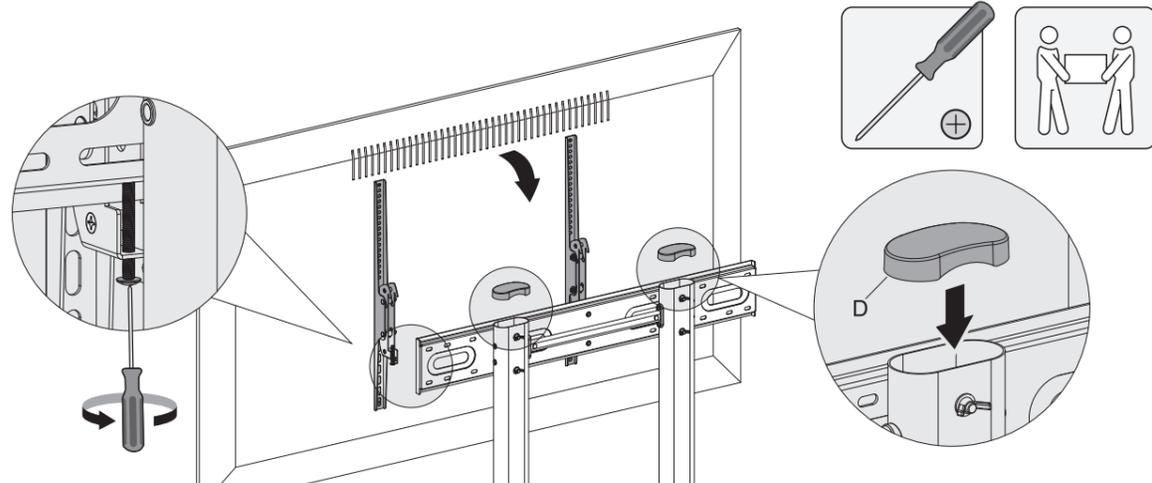


- Hook the display onto the universal plate.
 - Tighten the bottom screws to secure them.
- IMPORTANT:** Make sure the display is mounted correctly and the screws are tightened safely before releasing the display.


10. Installing the Camera Shelf

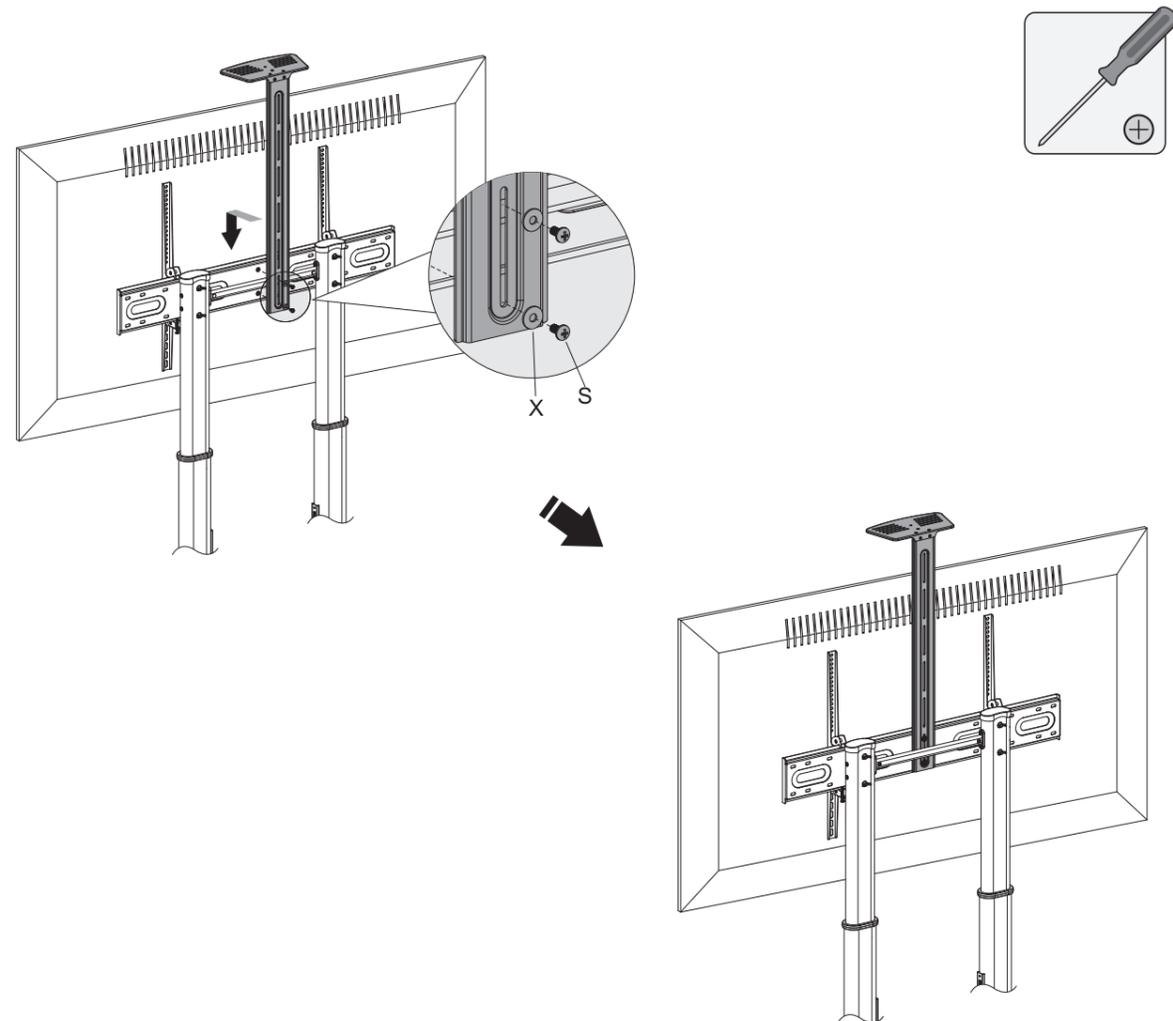

11. Installing the DVD Shelf

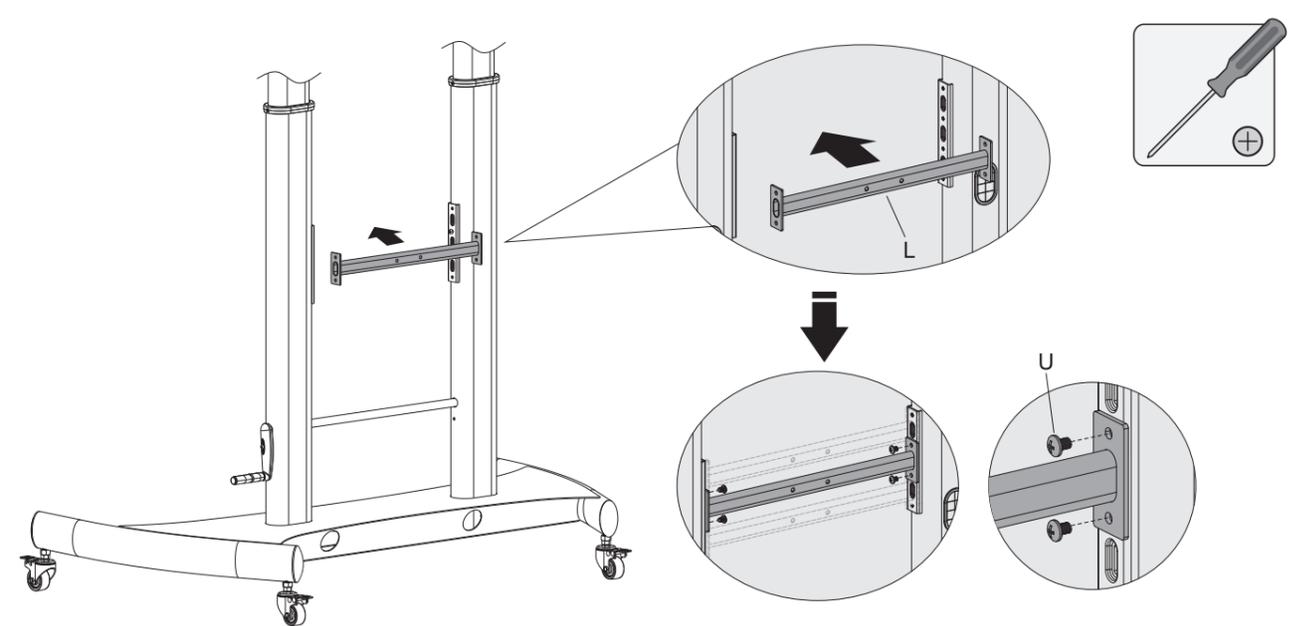

Install the support bar to the columns at the desired position and secure using the appropriate screws.

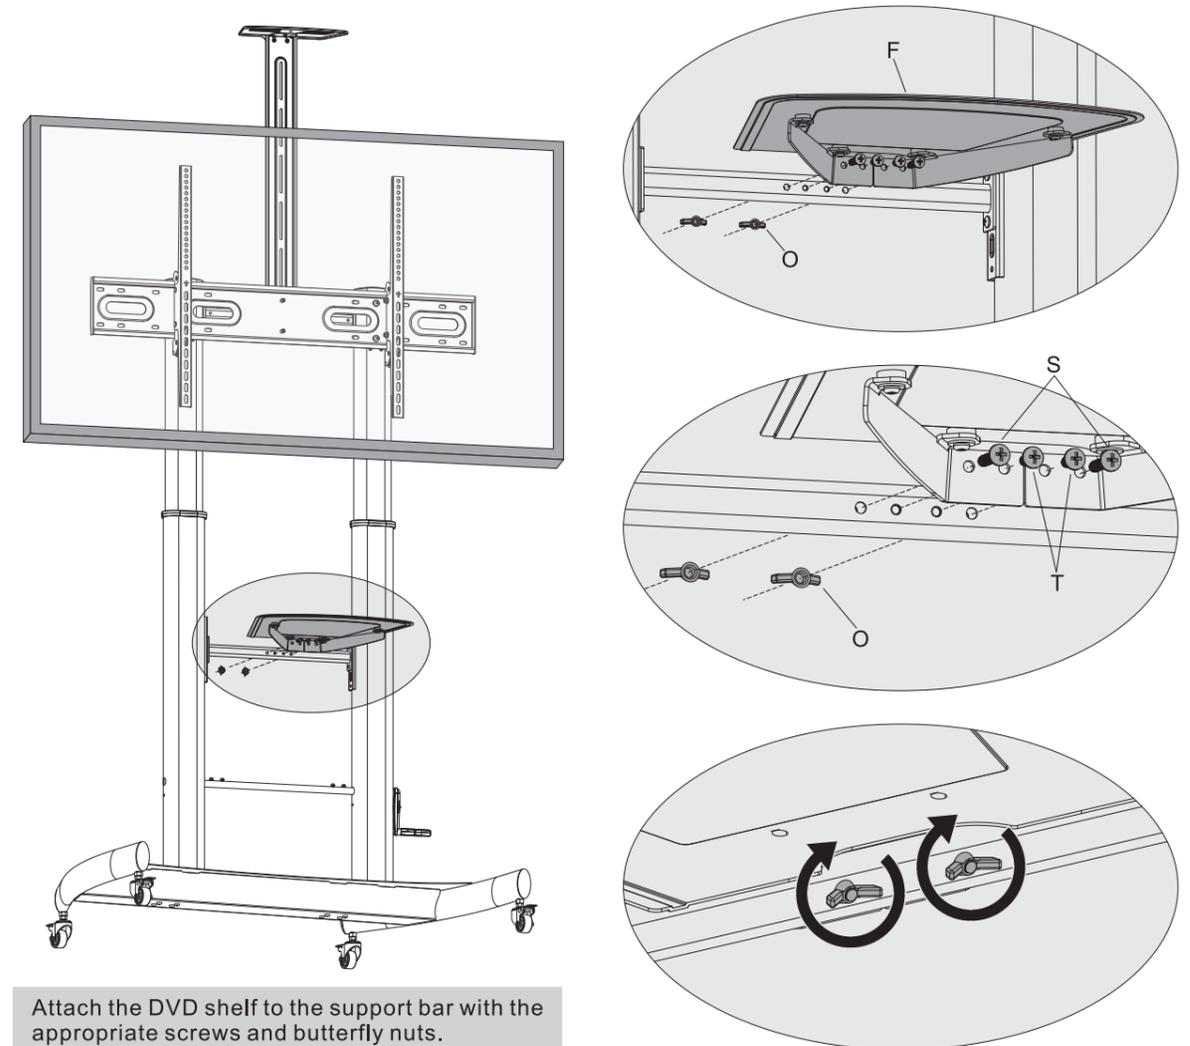

Attach the DVD shelf to the support bar with the appropriate screws and butterfly nuts. Tighten all screws and butterfly nuts to secure.