



IP-CS7

IP System Controller & Configurator

OPERATION MANUAL

DISCLAIMERS

The information in this manual has been carefully checked and is believed to be accurate. CYP (UK) Ltd assumes no responsibility for any infringements of patents or other rights of third parties which may result from its use.

CYP (UK) Ltd assumes no responsibility for any inaccuracies that may be contained in this document. CYP (UK) Ltd also makes no commitment to update or to keep current the information contained in this document.

CYP (UK) Ltd reserves the right to make improvements to this document and/or product at any time and without notice.

COPYRIGHT NOTICE

No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or any of its part translated into any language or computer file, in any form or by any means—electronic, mechanical, magnetic, optical, chemical, manual, or otherwise—without express written permission and consent from CYP (UK) Ltd.

© Copyright 2011 by CYP (UK) Ltd.

All Rights Reserved.

Version 1.1 August 2011

TRADEMARK ACKNOWLEDGMENTS

All products or service names mentioned in this document may be trademarks of the companies with which they are associated.

SAFETY PRECAUTIONS

Please read all instructions before attempting to unpack, install or operate this equipment and before connecting the power supply.

Please keep the following in mind as you unpack and install this equipment:

- Always follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Never spill liquid of any kind on or into this product.
- Never push an object of any kind into this product through any openings or empty slots in the unit, as you may damage parts inside the unit.
- Do not attach the power supply cabling to building surfaces.
- Use only the supplied power supply unit (PSU). Do not use the PSU if it is damaged.
- Do not allow anything to rest on the power cabling or allow any weight to be placed upon it or any person walk on it.
- To protect the unit from overheating, do not block any vents or openings in the unit housing that provide ventilation and allow for sufficient space for air to circulate around the unit.

REVISION HISTORY

VERSION NO.	DATE	SUMMARY OF CHANGE
v1.00	09/03/2018	First release

CONTENTS

1. Introduction	6
2. Applications	6
3. Package Contents	6
4. System Requirements	7
5. Features	7
6. Operation Controls and Functions	8
6.1 Front Panel	8
6.2 Rear Panel.....	8
6.3 Remote Control	9
6.4 IR Cable Pinouts	10
6.5 Serial Control.....	10
6.6 Telnet Control.....	11
6.7 RS-232 and Telnet Commands.....	12
6.8 WebGUI Control	18
7. Connection Diagram	31
8. Specifications.....	32
9. Acronyms.....	33

1. INTRODUCTION

This controller is a powerful and flexible solution for controlling multiple Video over IP (VoIP) extenders within same network. The user only needs to install this unit into the same local network as the extenders (Transmitter and Receiver) to easily define and configure channel routing selections, for both unicast and multicast scenarios, using the WebGUI. It is also possible to define and switch routes using customised groups or presets allowing for easy control over multiple video zones. Without the use of this centralised unit, each individual Transmitter and Receiver in the system would need to be controlled and configured directly through their own WebGUI.

Additionally, this unit supports controlling the matrix and video wall modes of connected VoIP units. The settings of all connected Transmitter/Receiver units, including IP address, netmask and extender status are clearly displayed within the WebGUI. The WebGUI is easily accessed via a web browser over a normal network connection or by directly connecting an HDMI display and USB keyboard & mouse to the unit. A trigger input interface is also provided to allow the easy addition of a remote control keypad, or other trigger-supporting products, which can be installed within a podium or within a table in a conference room or classroom. This interface can allow the user to activate pre-defined functions or presets with the simple press of a button. Standard control is available via WebGUI (remote or local), RS-232, Telnet and IR Remote.

2. APPLICATIONS

- /// Video/TV wall display and control
- /// Security surveillance and control
- /// Commercial advertising, display and control
- /// Home Theaters with Smart Home Controls
- /// Retail sales and demonstration

3. PACKAGE CONTENTS

- /// 1×IP Master Controller
- /// 1×5V/2.6A DC Power Adapter
- /// 1×Terminal Block (3-pin)

- /// 3×Terminal Block (5-pin)
- /// 1×3.5mm to IR Extender Cable
- /// 1×Remote Control (CR-183)
- /// 1×Shockproof Feet (Set of 4)
- /// 1×Operation Manual

4. SYSTEM REQUIREMENTS


An active internet connection from a switch or router for control of Ethernet devices.

5. FEATURES

- /// Enables the management and configuration of multiple Video over IP (VoIP) extenders through a single WebGUI
- /// Supports point-to-point (unicast) and multi-to-multi (multicast) routing selections
- /// Control over both matrix and TV wall modes using WebGUI presets
- /// Definable display groups
- /// WebGUI clearly displays the status of all connected Transmitters and Receivers, including IP address, channel selection, etc.
- /// Able to control an additional connected device via RS-232
- /// HDMI output displays the WebGUI and system status
- /// Supports the use of a USB mouse and keyboard to locally control the WebGUI (Optional)
- /// Can be powered by Ethernet switches supporting the IEEE 802.3af-2003 PoE standard (Optional)
- /// Trigger Control Keypad support for easy, single-button, preset activation (Optional)
- /// Standard control is available via WebGUI (remote or local), RS-232, Telnet, and IR Remote


6. OPERATION CONTROLS AND FUNCTIONS

6.1 Front Panel

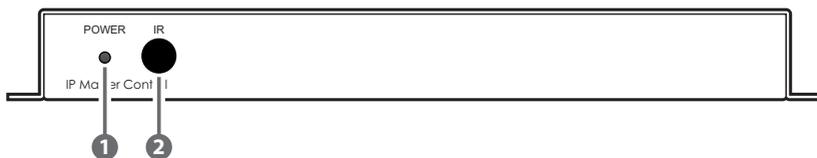

- ❶ **POWER LED:** This LED will illuminate to indicate the unit is on and receiving power.
- ❷ **IR WINDOW:** Accepts IR signals from the included IR remote for control of this unit only.

6.2 Rear Panel

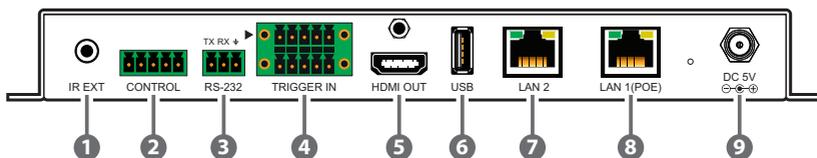

- ❶ **IR EXT:** Connect to the provided IR Extender to extend the IR control range of the unit. Ensure that the remote being used is within direct line-of-sight of the IR Extender.
- ❷ **CONTROL:** Connect to the device you wish to control via a 3 (or 5)-pin adapter cable to send RS-232 commands from the unit.
- ❸ **RS-232:** Connect to a PC, laptop or other serial control device with a 3-pin adapter cable to control the unit via RS-232.
- ❹ **TRIGGER IN:** Connect to the Trigger Control Keypad (OPTIONAL) or any device with trigger switch functionality such as window security alarms, motion detectors, door switches, etc. Each of the 8 trigger inputs will activate the associated preset when triggered. A minimum of 5V DC is required to activate the trigger.
- ❺ **HDMI OUT:** Connect to a standard HDMI display to view the unit's current status information and access the WebGUI directly without a PC.

- 6 **USB:** Connect a USB mouse and keyboard to control the unit's WebGUI as seen via the HDMI output port. Firmware update via USB is also supported.
- 7 **LAN 2:** Connect directly, or through a network switch, to your PC/ laptop to control the unit via WebGUI/Telnet.
- 8 **LAN 1 (PoE):** This port is used to connect to the Video over IP (VoIP) devices to be controlled. Connect to the VoIP units' private network, either directly or through their dedicated network switch, to enable detection and control over those units.


Note 1: Typically the VoIP device network is contained within in a separate subnet or, more frequently, in a physically separate network.

Note 2: If the connected network switch supports the IEEE 802.3af-2003 PoE (Power over Ethernet) standard, this unit can optionally be powered directly via this Ethernet port.


- 9 **DC 5V:** Plug the 5V DC power adapter into the unit and connect it to an AC wall outlet for power. (Optional, not required if the unit is powered via PoE).

6.3 Remote Control

- 1 **MACRO 1~12:** Press any of the 12 buttons to activate the saved preset assigned to that number.

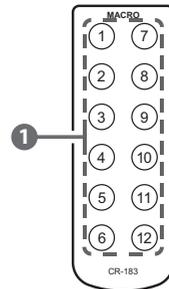

6.4 IR Cable Pinouts

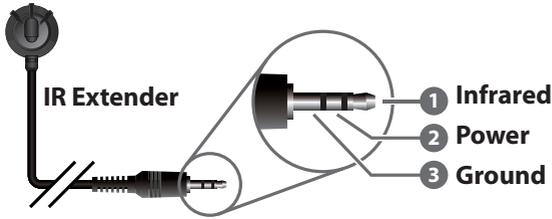

6.5 Serial Control

UNIT		PC	
Pin	Pinout	Pin	Pinout
		1	
1	TxD	2	RxD
2	RxD	3	TxD
		4	
3	GND	5	GND
		6	
		7	
		8	
		9	

SERIAL PORT SETTINGS	
Baud Rate	115200
Data Bits	8
Parity Bit	None
Stop Bits	1
Flow Control	None

6.6 Telnet Control

Before attempting to use Telnet control, please ensure that both the unit's LAN 2 port and the PC/laptop are connected to the same active networks.

To Access the Command Line Interface (CLI)	
Windows 7	Click Start , type "cmd", in the search field, and press Enter .
Windows XP	Click Start > Run , type "cmd", and press Enter .
Mac OS X	Click Go > Applications > Utilities > Terminal .

Once in the CLI (Command Line Interface) type "telnet" followed by the IP address of the unit and "23", then hit "Enter". This will connect us to the unit we wish to control. Type "help" to list the available commands.

```
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Users\Administrator>telnet 192.168.1.50 23
```

Note 1: By default the unit will obtain the LAN 2 IP address via DHCP. If you are unsure of the unit's current LAN 2 IP address, please check the unit's HDMI status display.

Note 2: Commands will not be executed unless followed by a carriage return. Commands are not case-sensitive.

Note 3: If the unit's IP address is changed then the IP address required for Telnet access will also change accordingly.

6.7 RS-232 and Telnet Commands

SYSTEM COMMANDS	
DESCRIPTION	PARAMETERS
HELP↵	
Show the full command list.	
GET_HARDWARE_VERSION↵	
Show the unit's hardware version.	
GET_FIRMWARE_VERSION↵	
Show the unit's current firmware version.	
SET_FACTORY_RESET↵	
Reset the unit to the factory defaults.	
SET_HISTORY_RESET↵	
Clear the unit's stored transmitter and receiver history list.	
REBOOT↵	
Reboot the unit.	

NETWORK COMMANDS	
DESCRIPTION	PARAMETERS
GET_IPCONFIG N1 ←←	
Show the current Ethernet configuration of the selected port.	Available values for N1 : 1 [LAN Port 1] 2 [LAN Port 2]
SET_IP_MODE N1 N2 ←←	
Set the IP assignment mode for the selected LAN port.	Available values for N1 : 1 [LAN Port 1] 2 [LAN Port 2] Available values for N2 : 0 [Static IP] 1 [DHCP] 2 [Auto IP]
GET_IP_MODE N1 ←←	
Show the IP assignment mode for the selected LAN port.	Available values for N1 : 1 [LAN Port 1] 2 [LAN Port 2]
SET_IP_ADDRESS N1 N2 ←←	
Set the IP address for the selected LAN port.	Available values for N1 : 1 [LAN Port 1] 2 [LAN Port 2] N2 = X.X.X.X [X = 0 ~ 255]
GET_IP_ADDRESS N1 ←←	
Show the current IP address of the selected LAN port.	Available values for N1 : 1 [LAN Port 1] 2 [LAN Port 2]

NETWORK COMMANDS	
DESCRIPTION	PARAMETERS
SET_NETMASK N1 N2 ↵	
Set the netmask for the selected LAN port.	Available values for N1 : 1 [LAN Port 1] 2 [LAN Port 2] N2 = X.X.X.X [X = 0 ~ 255]
GET_NETMASK N1 ↵	
Show the current netmask of the selected LAN port.	Available values for N1 : 1 [LAN Port 1] 2 [LAN Port 2]
SET_GATEWAY N1 N2 ↵	
Set the gateway address for the selected LAN port.	Available values for N1 : 1 [LAN Port 1] 2 [LAN Port 2] N2 = X.X.X.X [X = 0 ~ 255]
GET_GATEWAY N1 ↵	
Show the current gateway address of the selected LAN port.	Available values for N1 : 1 [LAN Port 1] 2 [LAN Port 2]

DISCOVERY SERVICE COMMANDS	
DESCRIPTION	PARAMETERS
GET_TX_DEVICE ↵	
List all supported VoIP Transmitter devices detected on LAN port 1's local network.	

DISCOVERY SERVICE COMMANDS	
DESCRIPTION	PARAMETERS
GET_RX_DEVICE ←	
List all supported VoIP Receiver devices detected on LAN port 1's local network.	

MACRO/GROUP COMMANDS	
DESCRIPTION	PARAMETERS
MACRO_RUN N1 ←	
Run preset (macro) N1.	N1 = 1 ~ 255 [Preset Number]
GET_MACRO_RUN N1 ←	
List the contents of preset (macro) N1.	N1 = 1 ~ 255 [Preset Number]
SET_GROUP_ROUTE N1 N2 ←	
Set all members of Group N1 to display Channel N2.	N1 = 1 ~ 255 [Group Number] N2 = 0 ~ 255 [Channel Number]
GET_GROUP_MEMBER N1 ←	
List all Receivers in group N1.	N1 = 1 ~ 255 [Group Number]

INDIVIDUAL VOIP UNIT COMMANDS	
DESCRIPTION	PARAMETERS
SET_CHANNEL N1 N2 ←	
Set the channel for the Tx or Rx at IP address N1.	N1 = X.X.X.X [X = 0 ~ 255, IP of Target Unit] N2 = 0~255 [Channel Number]
GET_CHANNEL N1 ←	
Show the current channel used by the Tx or Rx at IP address N1.	N1 = X.X.X.X [X = 0 ~ 255, IP of Target Unit]

INDIVIDUAL VOIP UNIT COMMANDS	
DESCRIPTION	PARAMETERS
SET_DEVICE_NAME N1 N2↵	
Set the name of the Tx or Rx at IP address N1.	N1 = X.X.X.X [X = 0 ~ 255, IP of Target Unit] N2 = {Name} [Alpha-numeric, 12 Chars Max]
GET_DEVICE_NAME N1↵	
Show the current name of the Tx or Rx at IP address N1.	N1 = X.X.X.X [X = 0 ~ 255, IP of Target Unit]
SET_NET_MODE N1 N2↵	
Set the network broadcast mode of the Tx or Rx at IP address N1.	N1 = X.X.X.X [X = 0 ~ 255, IP of Target Unit] Available values for N2 : 0 [Unicast Mode] 1 [Multicast Mode]
GET_NET_MODE N1↵	
Show the current network broadcast mode of the Tx or Rx at IP address N1.	N1 = X.X.X.X [X = 0 ~ 255, IP of Target Unit]
SET_VW_LAYOUT N1 N2 N3↵	
Set the horizontal and vertical display count of the video wall that the Rx at IP address N1 is a part of.	N1 = X.X.X.X [X = 0 ~ 255, IP of Target Unit] N2 = 1 ~ 16 [Horizontal Display Count] N3 = 1 ~ 16 [Vertical Display Count]

INDIVIDUAL VOIP UNIT COMMANDS	
DESCRIPTION	PARAMETERS
GET_VW_LAYOUT N1 ↵	
Show the horizontal and vertical display count of the video wall that the Rx at IP address N1 is a part of.	N1 = X.X.X.X [X = 0 ~ 255, IP of Target Unit]
SET_VW_POS N1 N2 N3 ↵	
Set the horizontal and vertical position of the Rx at IP address N1 within the defined video wall.	N1 = X.X.X.X [X = 0 ~ 255, IP of Target Unit] N2 = 0 ~ 15 [Horizontal Position] N3 = 0 ~ 15 [Vertical Position]
<i>Note: Cannot exceed the dimensions defined by VW_LAYOUT.</i>	
GET_VW_POS N1 ↵	
Show the horizontal and vertical position of the Rx at IP address N1 within the defined video wall.	N1 = X.X.X.X [X = 0 ~ 255, IP of Target Unit]

6.8 WebGUI Control

Device Discovery Tool

Please obtain the “Device Discovery” software from your authorised dealer and save it in a directory where you can easily find it.

Connect the unit and your PC/laptop to the same active network and execute the “Device Discovery” software. Click on “Find Devices on Network” and a list of devices connected to the local network will show up indicating their current IP address.

Find Devices on Network			
Product Name	Description	IP Address	MAC Address

By clicking on one of the listed devices you will be presented with the network details of that particular device.


Product ID	
Product Name	
MAC Address	00:00:00:00:00:00
IP Address	<input type="text"/>
Subnet Mask	<input type="text"/>
Gateway IP	<input type="text"/>
DNS	<input type="text"/>
IP Mode	Static
Web GUI Port	Static
Telnet Port	DHCP
S / N	0
Firmware Version	
Hardware Version	
Description	
Web GUI	Web GUI
<input type="button" value="Save"/> <input type="button" value="Reboot"/>	

- **IP Mode:** If you choose, you can alter the static IP network settings for the device, or switch the unit into DHCP mode to automatically obtain proper network settings from a local DHCP server. To switch to DHCP mode, please select DHCP from the IP mode drop-down, then click “Save” followed by “Reboot”.
- **WebGUI Hotkey:** Once you are satisfied with the network settings, you may use them to connect via Telnet or WebGUI. The network information window provides a convenient link to launch the “WebGUI” directly.

WebGUI Control Page

All functions of this unit are controllable via the built in WebGUI which is accessed by connecting your web browser to LAN 2's IP address or by connecting an HDMI display to the unit's HDMI output and attaching a USB mouse and keyboard to the unit's USB port. This control is presented across a number of separate tabs, including Monitor & Control, Preset Recall, System, Setting, Transmitter, and Receiver. A setup wizard is also provided to help simplify first-time setup. The individual functions will be introduced in the following sections.

When no user is logged in, a limited selection of tabs are available (Monitor & Control, Preset Recall, and System). This allows for easy user access to routing selection and presets while still protecting the more sensitive and critical setup and configuration controls. To log in to the WebGUI, switch to the System tab and click on the "Login" button. By default, both the Username and Password are set to "admin" for the WebGUI. The administrator password can be changed within the System tab of the WebGUI if desired.

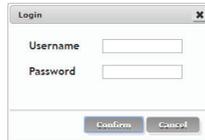

The image shows a screenshot of a web browser window displaying a login dialog box. The dialog box has a title bar with the text "Login" and a close button (X). Inside the dialog, there are two input fields: "Username" and "Password". Below the input fields, there are two buttons: "Confirm" and "Cancel".

i *If you are unsure of the unit's current LAN 2 IP address, please check the unit's HDMI status display.*

6.8.1 Monitor & Control Tab

This tab provides a graphical representation of all current Transmitters, Receivers and video groups. It also provides a simple way to change video routing by using drag and drop. Using the slider switch at the top of the tab, video thumbnails may be set to automatically update (Auto Refresh), or to only update when the “Refresh” button is clicked (Manual Refresh).



i This tab is fully functional even when the user is logged out.

Source Preview

This window displays preview thumbnails from all detected Transmitters along with their assigned names. If Auto Refresh is enabled, the thumbnails will update approximately once every second. To route a Transmitter’s source to a different Receiver, or to a video group, drag-and-drop can be used. Click and drag the thumbnail from the Preview side to drop it onto the preferred Receiver or Display Group on the Zone side.

Zone Preview

This window displays preview thumbnails from all detected Receivers along with their assigned names. If Auto Refresh is enabled, the thumbnails will update approximately once every second. All available Display Groups are also displayed here, however no preview thumbnail will be displayed for them. Display Groups are defined within the Setting tab.

i Due to the potential for the displays within a video group to be showing different sources, video groups will not show a thumbnail image.

6.8.2 Preset Recall Tab

This tab lists all currently defined Presets and provides a simple way to activate them. To activate a saved Preset, simply click on the appropriately named button. Presets are defined within the Setting tab.



i This tab is fully functional even when the user is logged out.

6.8.3 System Tab

This tab provides access to system configuration options including IP configuration for both LAN ports, login and user management, access to the setup wizard, and firmware update functionality.



i This tab will only display system information and provide a Login button if the user is logged out. All other functions will be greyed out.

LAN1 & LAN2

The unit's IP mode (DHCP or Static IP), IP address, netmask, and gateway can be set here. When the unit is set to "DHCP" mode, it will automatically

attempt to obtain proper configuration information from the local DHCP server. If no DHCP server is available, or the user wishes to configure the network settings manually, please set the unit to “Static IP” mode and enter the information as appropriate for your local network. Press “Save” to activate the changes.

Login & Logout

This window provides Login, Logout, Change Password, and Reset buttons as well as a button to start the Setup Wizard.

Firmware Upgrade

It is possible to update the firmware of this unit as well as to update the firmware of detected Transmitters and Receivers. The number of currently detected Transmitters and Receivers is also listed here.

To update the unit's firmware, or the firmware of detected Transmitters or Receivers, click the “Choose File” button beneath the appropriate device type (IP Master Controller, Transmitter, or Receiver) to open the file selection window and then select an appropriate firmware update file (*.bin format) located on your local PC. After selecting the file, click the “Upgrade” button beneath the appropriate device type to begin the firmware update process. Once the firmware update process has completed each updated unit will reboot.

 *The firmware update process can take several minutes, please do not power the units off once the process has begun.*

6.8.4 Setup Wizard

Pressing the “Wizard” button will start the step by step Setup Wizard. It will also clear the unit’s stored Transmitter/Receiver history, Presets, and Groups. The following 4 windows will then be presented, in order, to simplify the initial setup of a new Video over IP routing installation. Prior to pressing the “Finish” button on the final page of the wizard, it is possible to move freely between all 4 steps of the Setup Wizard to make additional changes to the configuration. Once “Finish” has been pressed, the changes will be committed to all involved units and they will reboot.

Transmitter Setting

This wizard step provides a way to control the detailed settings of each detected Transmitter. First, click on the “Scan” button to check the LAN 1 network for all available Transmitters. Once the list is populated with

Transmitters, the settings for each can be modified (See the “Transmitter Tab” section for configuration details).

After all desired changes have been completed, press the “Next” button to move to the next wizard step.

Receiver Setting

This wizard step provides a way to control the detailed settings of each detected Receiver. First, click on the “Scan” button to check the LAN 1 network for all available Receivers. Once the list is populated with Receivers, the settings for each can be modified (See the “Receiver Tab” section for configuration details).

After all desired changes have been completed, press the “Next” button to move to the next wizard step.

Group Setting

This wizard step provides a way to define groups of displays that will all receive the same routed source when used in Presets or from the Monitor & Control tab (See the “Display Group Configuration” section for configuration details).

1 Transmitter Setting
Scan Transmitters and then Set Items.

2 Receiver Setting
Scan Receivers and then Set Items.

3 Group Setting
Add Group for routing control.

4 Preset Setting
Add Preset for Preset Recall.

Press Add button to add Group, then fill in the Group Name and select Receivers which you want to add to this Group.

Group Name

Remove Edit VideoGroup1

Add

Previous Next Finish

After all desired Display Groups have been defined, press the “Next” button to move to the next wizard step.

Preset Setting

This wizard step provides a way to add, edit or remove routing Presets (See the “Preset Configuration” section for configuration details).

1 Transmitter Setting
Scan Transmitters and then Set Items.

2 Receiver Setting
Scan Receivers and then Set Items.

3 Group Setting
Add Group for routing control.

4 Preset Setting
Add Preset for Preset Recall.

Press Add button to add Preset, then fill in the Preset Name and routing actions which you want to add to this Preset.

Preset Name

Remove Edit All-Game

Remove Edit All-Media

Remove Edit Game-Media

Remove Edit Media-Game


Add

Previous Next Finish

After all desired Presets have been defined, press the “Finish” button to complete the Setup Wizard and commit all setup changes. All involved units will reboot.

6.8.5 Setting Tab


This tab allows for the assignment and configuration of routing Presets and Display Groups.

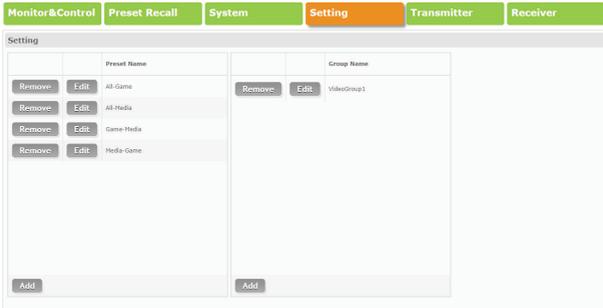

i This tab is not available when the user is logged out.

Preset Configuration

The Preset window provides a way to add, edit or remove routing Presets. Pressing the “Add” button will open a new blank Preset settings window. Pressing the “Edit” button next to an existing Preset will open that Preset’s settings window. Pressing the “Remove” button next to an existing Preset will delete that Preset. Up to 250 Presets can be easily defined and managed.

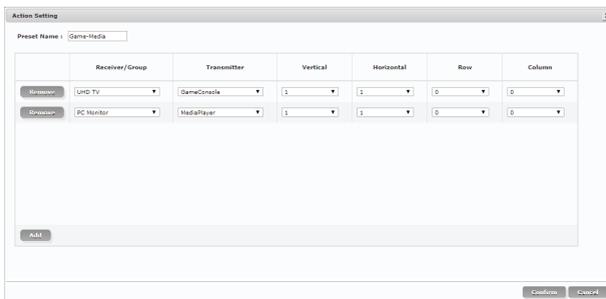

Once the Preset settings window is open, the name of the Preset can be set at the top of the window. Pressing the “Add” button will add an additional Receiver/Group routing line. To delete an existing route, click on the “Remove” button next to the route to remove. Once all routes for the Preset have been defined, press the “Confirm” button to save the

changes. Each route line has the following configurable settings:

- **Receiver/Group:** Use the dropdown to select a Receiver or Group to route the selected source to.
- **Transmitter:** Use the dropdown to select the Transmitter to route to the selected Receiver/Group.
- **Vertical (Video Wall):** Use the dropdown to define the number of displays in the video wall, measured vertically. (Maximum is 8 displays.)
 -  *If this route is not part of a video wall, leave the value at 1.*
- **Horizontal (Video Wall):** Use the dropdown to define the number of displays in the video wall, measured horizontally. (Maximum is 8 displays.)
 -  *If this route is not part of a video wall, leave the value at 1.*
- **Row (Video Wall):** Set the vertical position of the currently selected display. (Counts top to bottom, from 0 to 7.)
 -  *If this route is not part of a video wall, leave the value at 0.*
- **Column (Video Wall):** Set the horizontal position of the currently selected display. (Counts top to bottom, from 0 to 7.)
 -  *If this route is not part of a video wall, leave the value at 0.*

Display Group Configuration


The Display Group device selection window provides a way to define a group of displays that will all receive the same routed source when used in Presets or from the Monitor & Control tab.



The name of the Display Group is set at the top of the window. To add Receivers to the Display Group, click on the name of each one to include. To remove a Receiver from the group, click on the Receiver's name a second time. After all selections have been made, click on the "Confirm" button to save the changes.

6.8.6 Transmitter Tab

This tab provides a way to control the detailed settings of each detected Transmitter. After all desired changes have been completed, press the "Apply" button to send the changes to the appropriate Transmitters and activate them. After receiving the new settings, each Transmitter will reboot.

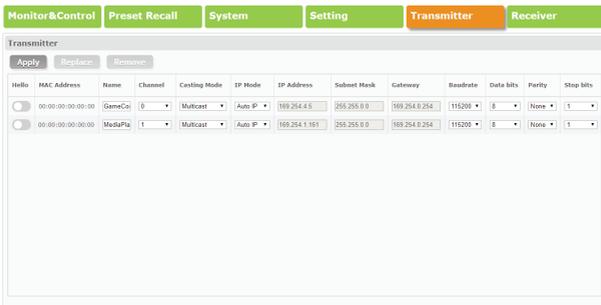

i *This tab is not available when the user is logged out.*

Transmitter Configuration

- **Hello:** Clicking on this switch will cause the selected unit to immediately begin flashing the LEDs on the front of the unit to make it easy to find. Clicking it a second time returns the LEDs to their normal behavior.
- **MAC Address:** Displays the unit's detected MAC address.
- **Name:** The unit's assigned name can be changed here. Up to 12 alpha-numeric characters are allowed. By default, new units will use their MAC address as their name.
- **Channel:** Use the dropdown to select the broadcast channel for the Transmitter. All Receivers on the local network that are set to the same channel will receive video from this Transmitter. The available channel range is from 0 to 255.

i *Every Transmitter within the same local network must be assigned a different broadcast channel in order to avoid conflicts.*

- **CASTING Mode:** Use the dropdown to switch the broadcasting mode used by the unit between Multicast and Unicast.

i *Receivers must be set to the same casting mode as the Transmitter in order to receive video.*

- **IP Mode & IP Settings:** The IP mode of each unit may be switched between "Auto IP", "DHCP" or "Static IP". When the unit is set to Auto IP mode it will automatically assign itself an APIPA address from the 169.254.XXX.XXX range. When the unit is set to DHCP mode it will attempt to automatically obtain an IP address from a DHCP server. When the IP mode is set to static IP, you can manually set the IP address, netmask and gateway address.

i *The default network setting is "Auto IP".*

- **Serial Settings:** Set the desired baud rate, data bits, parity, and stop bits for the unit's RS-232 extension function.

i *Linked Transmitters and Receivers must have the same serial settings.*

6.8.7 Receiver Tab

This tab provides a way to control the detailed settings of each detected Receiver. After all desired changes have been completed, press the “Apply” button to send the changes to the appropriate Receivers and activate them. After receiving the new settings, each Receiver will reboot.



i This tab is not available when the user is logged out.

Receiver Configuration

- **Hello:** Clicking on this switch will cause the selected unit to immediately begin flashing the LEDs on the front of the unit to make it easy to find. Clicking it a second time returns the LEDs to their normal behavior.
- **MAC Address:** Displays the unit’s detected MAC address.
- **Name:** The unit’s assigned name can be changed here. Up to 12 alpha-numeric characters are allowed. By default, new units will use their MAC address as their name.
- **Channel:** Use the dropdown to select the broadcast reception channel for the Receiver. The Receiver will display the video stream from the Transmitter using the selected broadcast channel. The available channel range is from 0 to 255.
- **Casting Mode:** Use the dropdown to switch the network broadcast mode supported by the unit between Multicast and Unicast.

i Receivers must be set to the same casting mode as the Transmitter in order to receive video.


- **IP Mode & IP Settings:** The IP mode of each unit may be switched between "Auto IP", "DHCP" or "Static IP". When the unit is set to Auto IP mode it will automatically assign itself an APIPA address from the 169.254.XXX.XXX range. When the unit is set to DHCP mode it will attempt to automatically obtain an IP address from a DHCP server. When the IP mode is set to static IP, you can manually set the IP address, netmask and gateway address.

 *The default network setting is "Auto IP".*

- **Serial Settings:** Set the desired baud rate, data bits, parity, and stop bits for the unit's RS-232 extension function.

 *Linked Transmitters and Receivers must have the same serial settings.*

7. CONNECTION DIAGRAM

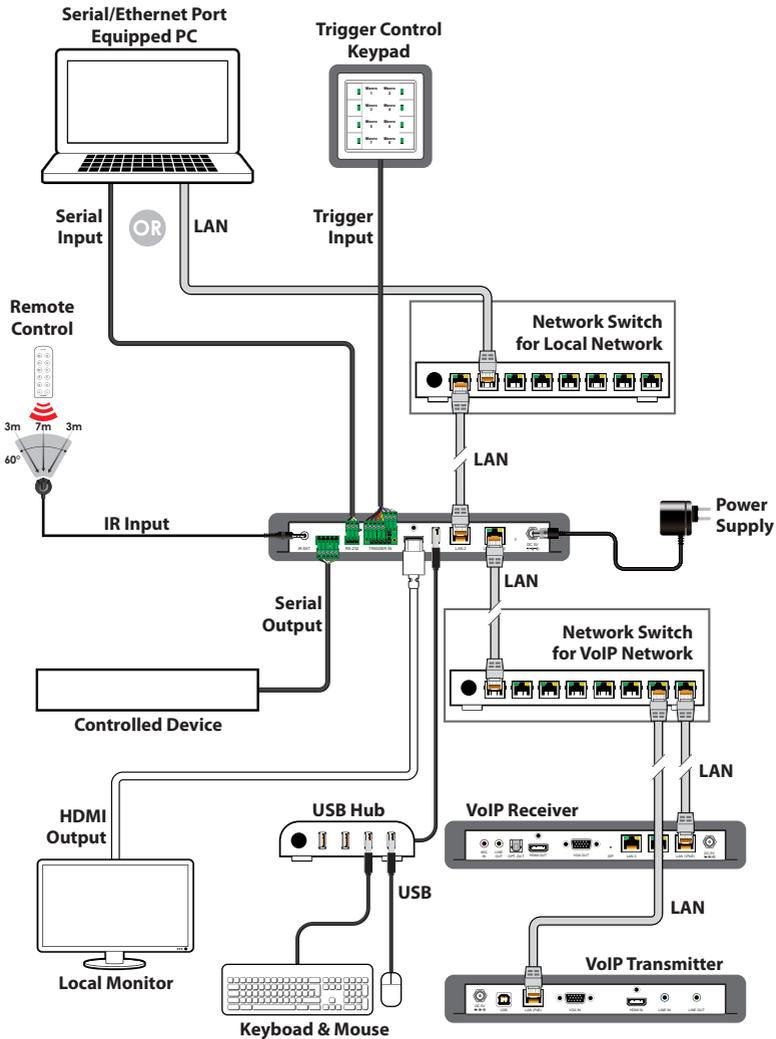

8. SPECIFICATIONS

Input Ports	1×IR Extender [3.5mm] 1×RS-232 [3-pin Terminal Block] 8×Trigger [10-pin Terminal Block]
Output Ports	1×HDMI 1×RS-232/422/485 [5-pin Terminal Block]
Control Ports	1×USB [Type-A] 2×LAN [RJ-45]
HDMI Output Resolution	1080p@60Hz
IR Frequency	30 - 50kHz (30 - 60kHz under ideal conditions)
Baud Rate	Up to 115200bps
Power Supply	5V/2.6A DC (US/EU standards, CE/FCC/UL certified)
ESD Protection	Human Body Model: ±8kV (Air Discharge) ±4kV (Contact Discharge)
Dimensions	231.5mm×25mm×108mm (W×H×D) [Case Only] 231.5mm×25mm×117mm (W×H×D) [All Inclusive]
Weight	250g
Chassis Material	Metal
Silkscreen Colour	Black
Operating Temperature	0°C - 40°C/32°F - 104°F
Storage Temperature	-20°C - 60°C/-4°F - 140°F
Relative Humidity	20 - 90% RH (Non-condensing)
Power Consumption	2.99W

9. ACRONYMS

ACRONYM	COMPLETE TERM
CLI	Command-Line Interface
DHCP	Dynamic Host Configuration Protocol
GUI	Graphical User Interface
HDMI	High-Definition Multimedia Interface
IEEE	Institute of Electrical and Electronics Engineers
IP	Internet Protocol
IR	Infrared
LAN	Local Area Network
MAC	Media Access Control
PC	Personal Computer
PoE	Power over Ethernet
TCP	Transmission Control Protocol
USB	Universal Serial Bus
VoIP	Video over IP



CYP (UK) Ltd., Unit 7, Shepperton Business Park, Govett Avenue, Shepperton,
Middlesex, TW17 8BA

Tel: +44 (0) 20 3137 9180 | Fax: +44 (0) 20 3137 6279

Email: sales@cypeurope.com

www.cypeurope.com

v1.00