




# BT7012 STEEL PURLIN MOUNT FOR 50MM POLES

## SETTING THE POLE VERTICAL

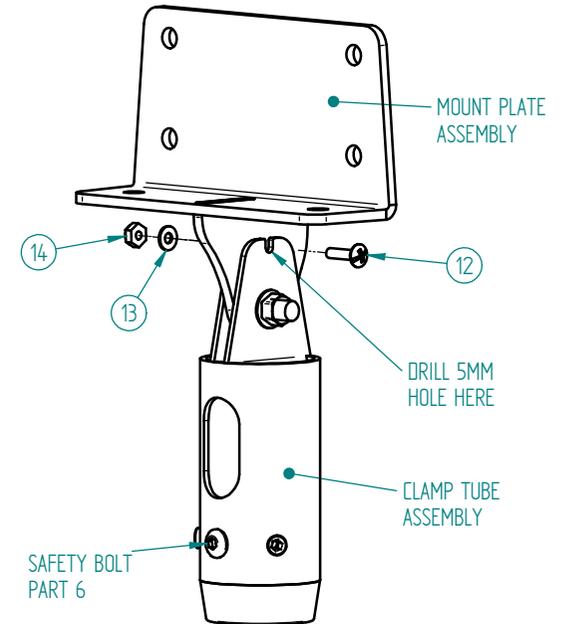

WHEN MOUNTING HEAVY EQUIPMENT AN OPTIONAL LOCKING BOLT (PART 12) MAY BE USED TO SET THE POLE VERTICAL AT ANY CEILING PITCH UP TO 45°

- ONCE SECURED TO THE PURLIN, ALLOW THE CLAMP TUBE ASSEMBLY TO NATURALLY HANG PLUMB.




- DRILL A 5MM HOLE THROUGH THE MOUNT PLATE ASSEMBLY USING THE SLOT IN THE CLAMP TUBE ASSEMBLY AS A GUIDE.

- PASS THE SCREW THROUGH BOTH ASSEMBLIES AND ADD THE WASHER AND NUT AS ILLUSTRATED.

- ENSURE SAFETY BOLT (PART 6) IS IN PLACE BEFORE ANY AV EQUIPMENT IS FITTED.

### PARTS LIST

No	PART NAME	QTY
1	MOUNT PLATE ASSEMBLY	1
2	CLAMP TUBE ASSEMBLY	1
3	M10 X 30 HEX BOLT	5
4	M10 OD19 T1 PLAIN WASHER	2
5	M10 NY-LOCK NUT	5
6	M8 X 60 SAFETY BOLT	1
7	M10 X 10 GRUB SCREW	2
8	PLASTIC TAPER MOULDING	1
9	5MM ALLEN KEY (PART 6 + 7)	1
10	LARGE BACK PLATE	1
11	SMALL BACK PLATE	1
12	M5 X 20 DOME HEAD SCREW	1
13	M5 OD12 T1 PLAIN WASHER	1
14	M5 NY-LOCK NUT	1

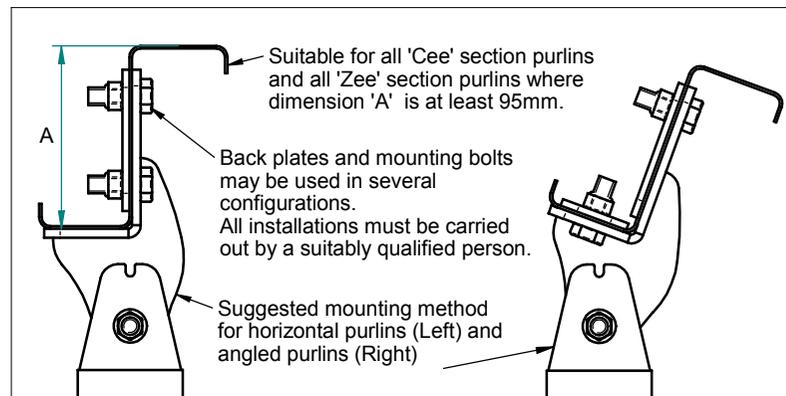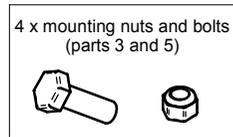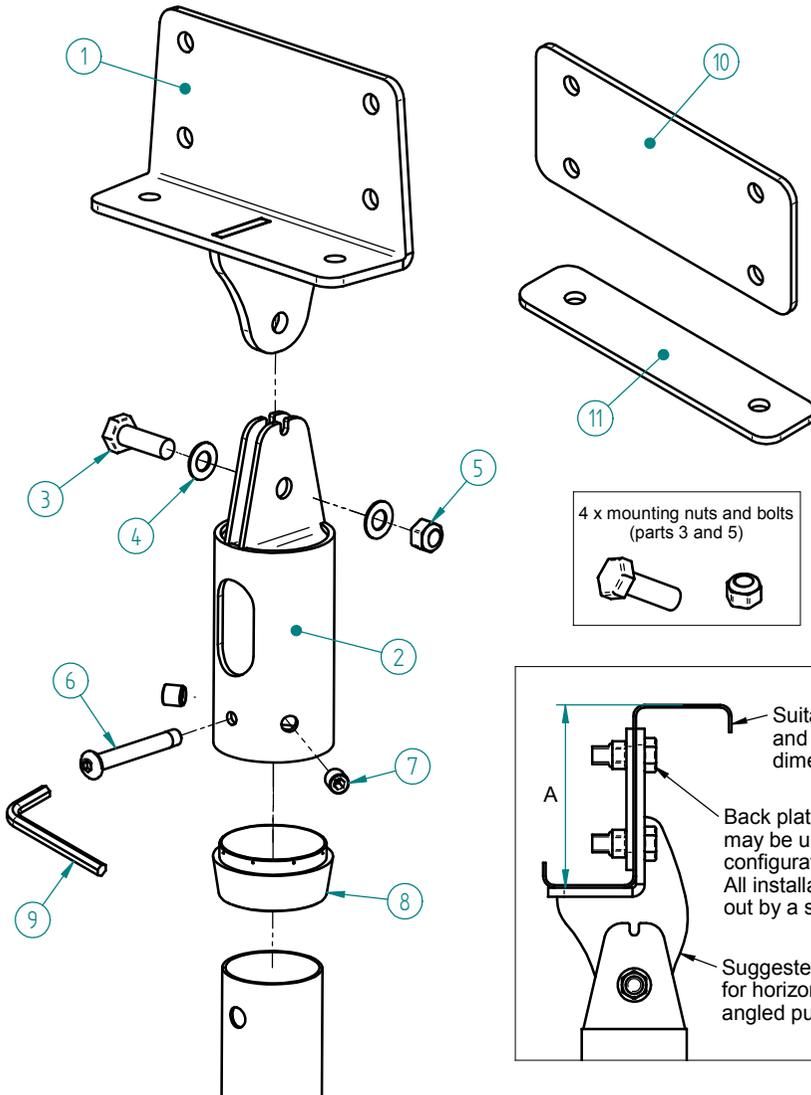

COPYRIGHT 2006  
B-TECH INTERNATIONAL LIMITED, CROYDON, CR0 9UG, UK  
WWW.B-TECH-INT.COM

PLEASE KEEP THIS PARTS LIST FOR FUTURE REFERENCE